
One-click wireless screen mirroring system User manual





Wireless screen mirroring

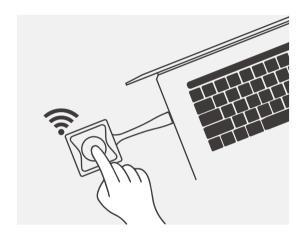


One-click sharing




Multi-platform compatibility

Packing Accessories

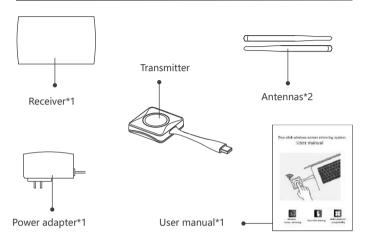

Base Unit Interface

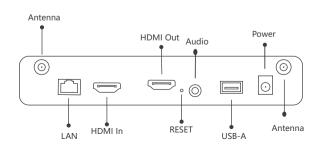



Installation and User Instructions

- 1, Take out the antenna and assemble on the back of the Base Unit.
- Connect the Base Unit to the display screen via an HDMI cable, then power on the Base Unit Wait for approximately 30 seconds, and the product's standby screen will appear on the display terminal.
- 3, Insert the Button into the laptop (for the first use, the Windows system will automatically install the USB driver, wait for the driver installation to complete). The Button's LED light will flash blue, and the computer will automatically pop up with the mobile USB driver ESHOW.

(Note: The HDMI Button and TYPE-C Button do not require running any software. After plugging into the computer, it will automatically connect to the Base Unit. After about 15 seconds, the blue light will be stay on, indicating a successful connection. Single-click the Button to screen cast.)

4, ①For the first use, need to manually click and run the software eshow.exe for USB drive (Mac users also need to enter the user login password), and the Button will start to establish a connection with the Base Unit (For the second and subsequent uses, just insert the Button and wait for a moment, and the application will run automatically) ②Wait for the LED light on the Button to turn into a steady blue light, and a message saying "Button connected to Base Unit successfully, ready to share" will appear in the lower right corner of the computer screen. Single-click the Button to screen cast. At this time, the LED light on the Button will turn red.

(Note: The HDMI Button and TYPE-C Button do not require running a program, so skip this step. After successful screen casting, the light on the Button will also turn red, indicating normal operation.)



*By default, Button is paired at the factory. If you cannot screen cast successfully, please manually pair the Button with the Base Unit. Pairing method: Connect the Button to the Base Unit USB port. The button light will flash continuously, and after a few seconds, it will turn on steadily, indicating a successful pairing.

For iPad/iPhone Users



Select the ESHOW-XXXXXX device in the wireless local area network to establish a network connection. (The initial password is: 12345678)



②Slide up from the Button of the phone to access the control center, and tap on the Screen Mirroring or AirPlay option.



③Select the ESHOW-XXXX device, and tap to start screen casting.

Android Users

- Two ways to screen cast on Android phones/tablets:
- 1.Slide down the menu on Android phones/tablets select Wireless Screen

 Casting choose the screen caster to start casting; (Using the native Miracast protocol for screen casting does not require connecting to the screen caster's WiFi)

 Note: Some models are not supported, please consult customer service for details.



(1) Slide down the menu and tap on Wireless Screen Casting.



(2) Select the display device.



(3) Connection successful, start screen casting.

Web Settings

Connect your computer or mobile device to the Base Unit Wi-Fi SSID. Under normal circumstances, the wired and wireless login IP is displayed on the upper left corner of the standby screen (as shown in Figure 1). Enter the Wi-Fi IP in the browser (it is recommended to use Google Chrome), and you will be redirected to the login interface. Enter the account:

User name: admin:

Password: admin:

to access the web for settings changes.

- 1, OS Version: V2.6.1-H
 - Wi-Fi IP: 192.168.118.1
 - Wi-Fi SSID: ESHOW D6196C
- 2, You can modify the Base Unit output resolution for HDMI/VGA.




3, You can change the Wi-Fi name and password, 2.4G/5G, channel, and network settings.



Base Unit Wired and Wireless Bridging

After connecting the Base Unit wired network port or wireless network card to the local area network router, you can connect your phone or tablet to the Base Unit. This allows you to cast screens while also accessing the internet, as shown in the figure below:


Diagram Description:

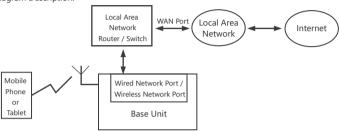

Screens Touch Back

Base Unit can connect a mouse or touchscreen to remotely control the screen of the computer being projected. This enables efficient interaction during screencasting and improves meeting productivity.

To use this feature, insert the transmitter into the computer, press the Button, and start display smoothly. Then, insert the mouse into the USB port of the

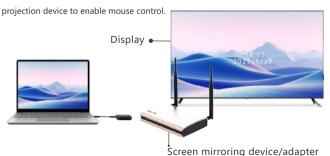

FAQ

- 1. Computer Screen Sharing:
- (1) Press the Button briefly, and if the red light comes on, the screen will be shared.
- (2) Press the Button briefly, and if the blue light comes on, the screen sharing will be exited.
- (3) When multiple screens are being shared, press and hold one of the Buttons. If the red light comes on, the other screens will be exited, leaving only the screen being shared.
- 2. Computer Audio Sharing:
- (1) During screen sharing, if there is no audio on the computer, the display will automatically share the audio.
- (2) When sharing multiple screens, there will be no audio mixing, and only the last shared screen will have audio
- (3) When sharing multiple screens, after the last shared screen is exited, the audio from the previous screen will be automatically shared.

FAQ

- 3, ESHOW Button Pairing: All devices have been paired with the Base Unit before it leaves the factory, and the Base Unit identification code is unique.
 - If any of the following situations occur:
- (1) Software upgrade;
- (2) Web settings are changed;
- (3) The Button needs to be used with another device. Then you need to re-pair the Button with the host.
 - Simply insert the Button into the Base Unit USB port, and when the button's red light stays on, the pairing is successful.
- 4, Connection Issue: If the computer's blue light flashes for a long time after inserting the Button, and the screen keeps showing a connection dialog box, just re-pair the Button by inserting it into the Base Unit USB port.
- 5, Computer Lock Screen Status: When the computer enters lock screen mode, screen casting is not possible, and the Button's indicator light will be blue.

6, Connection and Screen Casting Instability Issue: Use a WiFi analyzer installed on an Android phone to check the surrounding WiFi environment and see if there is much WiFi interference (try to have no more than 3 signal sources on one channel) and whether the host's WiFi signal strength is sufficient (it should be stable at more than -70dBm). If there is a lot of interference, log in to the Base Unit WEB to change the channel (there are 9 channels available on the 5G band, it is recommended to use 5G instead of 2.4G) to a relatively idle channel. If the signal strength is weak, then check the host's placement and move the Base unit until the signal strength is stable at more than -70dBm.

Warranty Card

Dear Customer,

Hello! Thank you for using our product. To make our service more satisfactory, please read the warranty instructions carefully and keep this warranty card in a safe place after purchasing the product.

User Name		Contact Person	
Purchase Date		Contact Phone	
Product Name		Product Model	
Product Serial Number		Invoice Number	
Contact Address			
Distributor Name			
	Date	Cause of Failure and Handling	
Maintenance			
Record			

Warranty Instructions

- 1. This warranty card must be fully and accurately filled out and stamped by the final direct distributor. Without a stamp, our company will not be responsible for the warranty
- If the product malfunctions during the warranty period when used correctly
 according to the instructions, our company will provide free repair services with
 this warranty card and a valid purchase certificate (such as the purchase invoice).

also enjoy our company's paid repair services after the warranty period.

- 3. Under normal use conditions, our company promises a 1-year quality guarantee for the products sold, with the specific duration based on the contract signed. Our company will provide free warranty services for the products sold within the relevant years from the date of purchase.
- If you have any issues with the product you purchased, please contact your distributor or sales man for after-sales service.
- 5. Our company will not undertake free warranty obligations in the following situations:
- A. Product damage caused by violating the usage instructions in the user manual;
- B. Product damage caused by unauthorized disassembly or self-repair;
- C. Product damage caused by exceeding operating environment conditions;
- D. Product damage caused by abnormal force, natural disasters, or other irresistible forces:
- E. No warranty card or valid purchase certificate;
- F. Tampering with or damaging protective stickers.

The final interpretation of the above warranty terms belongs to our company.